


Öffnungsbegrenzung
E/R/ISM

DE Montageanleitung
GB Mounting instructions



Opening restrictor
E/R/ISM

GEZE


145338-00

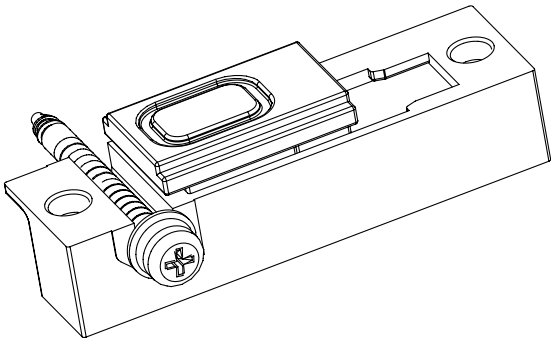


A

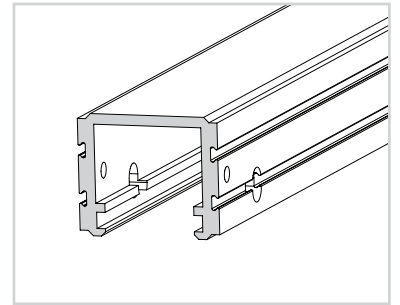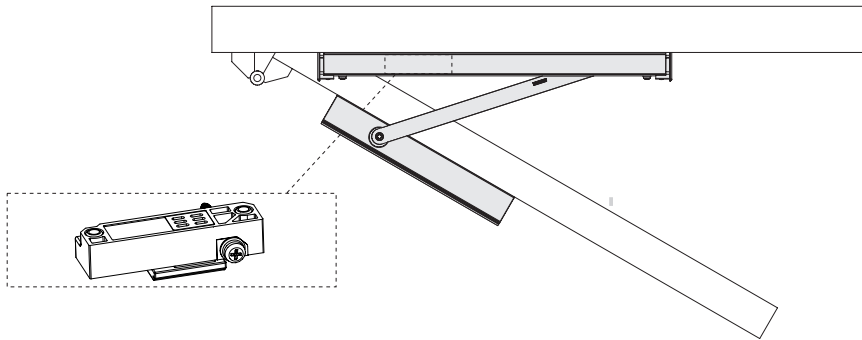


1

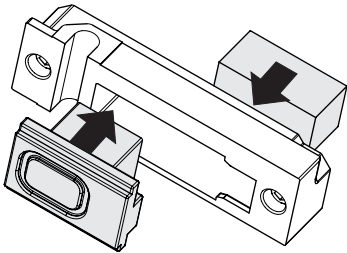


2

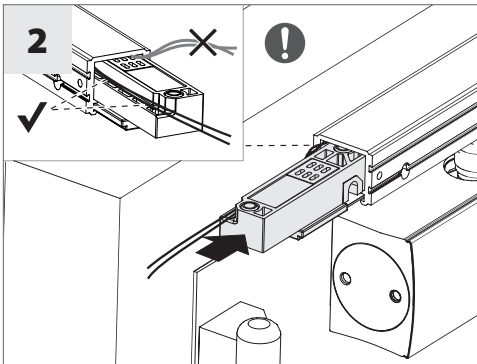


3

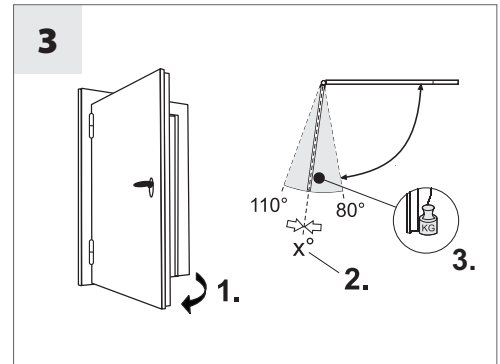


4

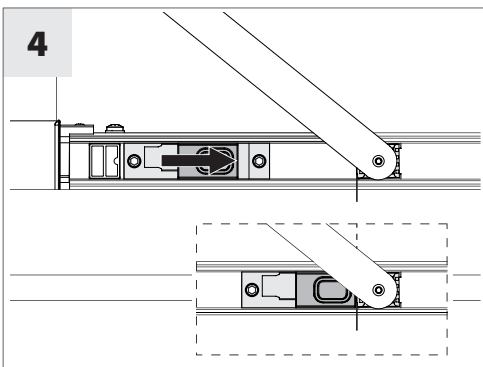


5

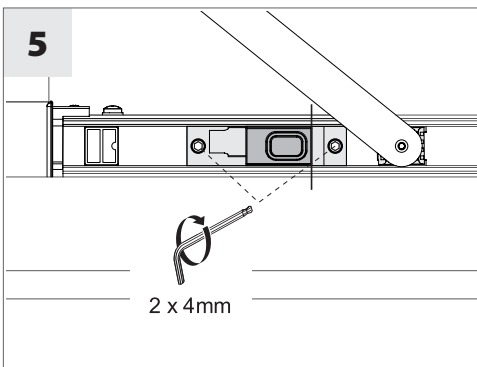



6












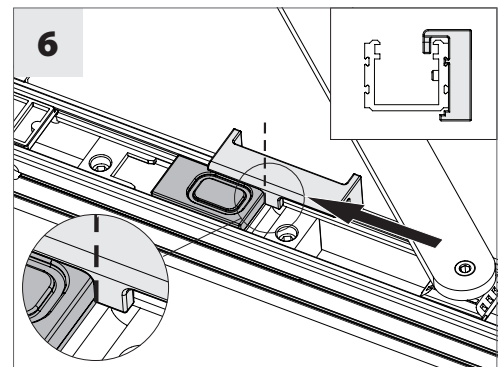


7

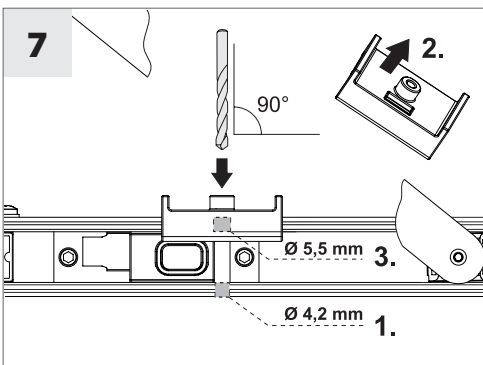

8

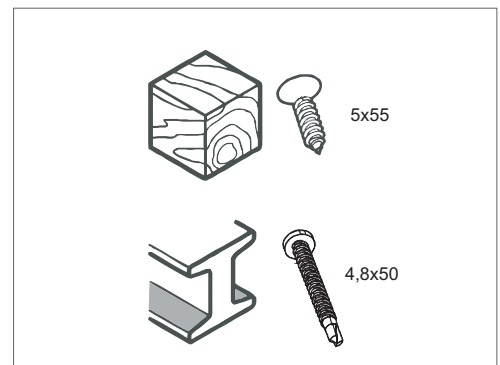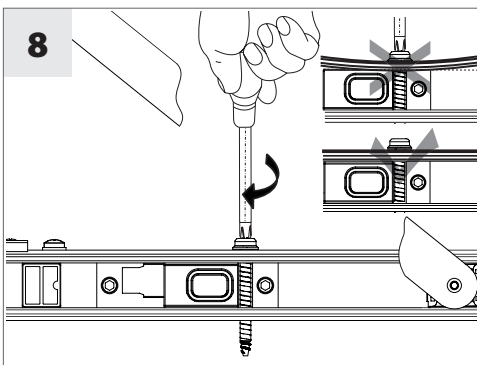

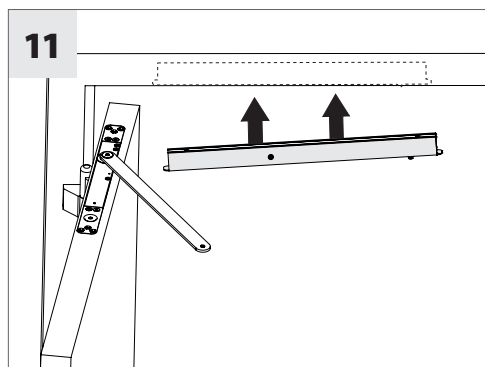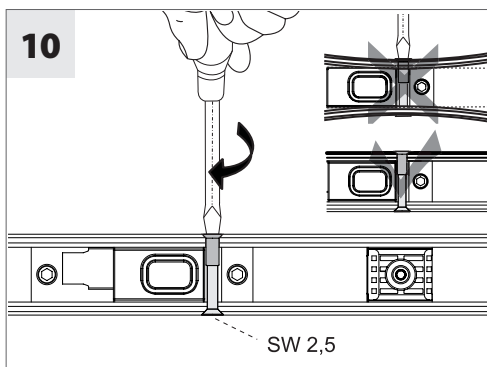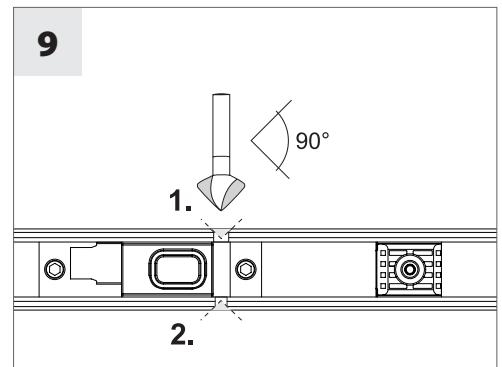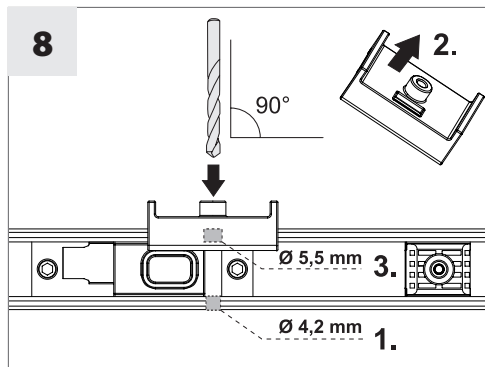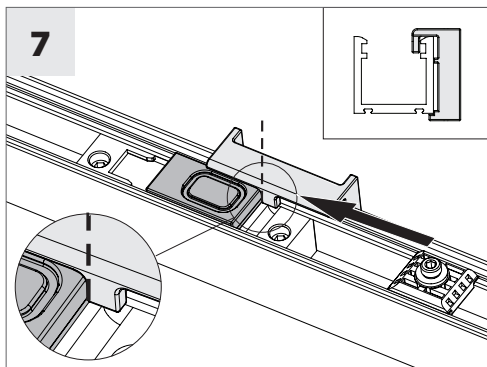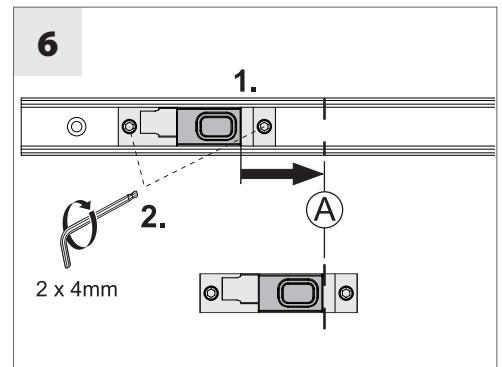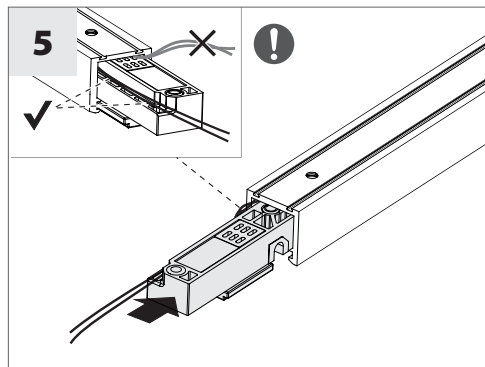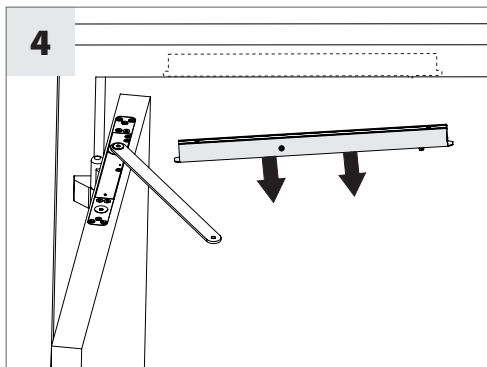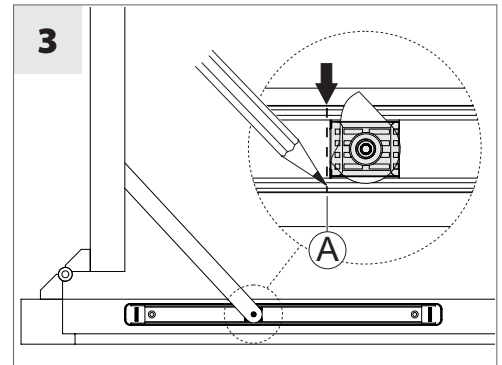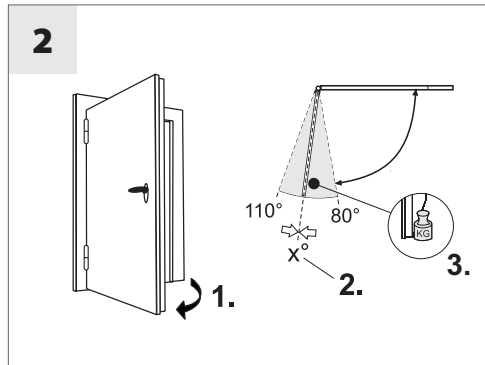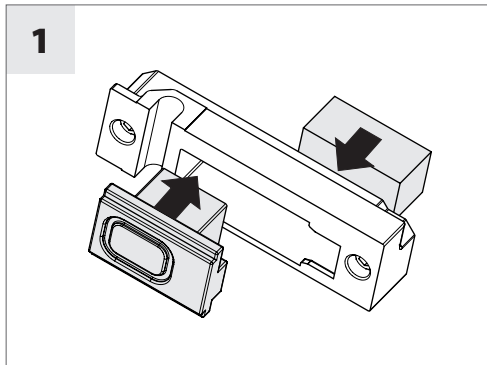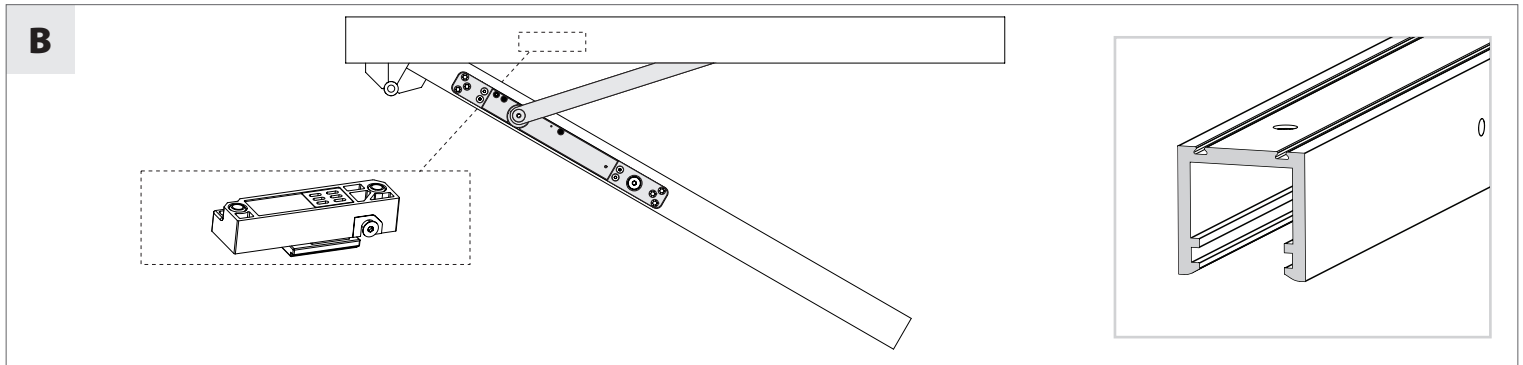

SW 2,5